


INSTALLATION INSTRUCTIONS EXTENSION KIT

Model No: 325 I

Recommended Installation by a Professional Plumbing Contractor

1. Connect pop-up ROD (I) to extension kit ROD (# 3251).
2. Bend both pop-up ROD (I) and extension kit ROD (#3251) as shown in Figure I.
3. Trim the extension kit ROD (#3251) as needed and complete the pop-up installation.

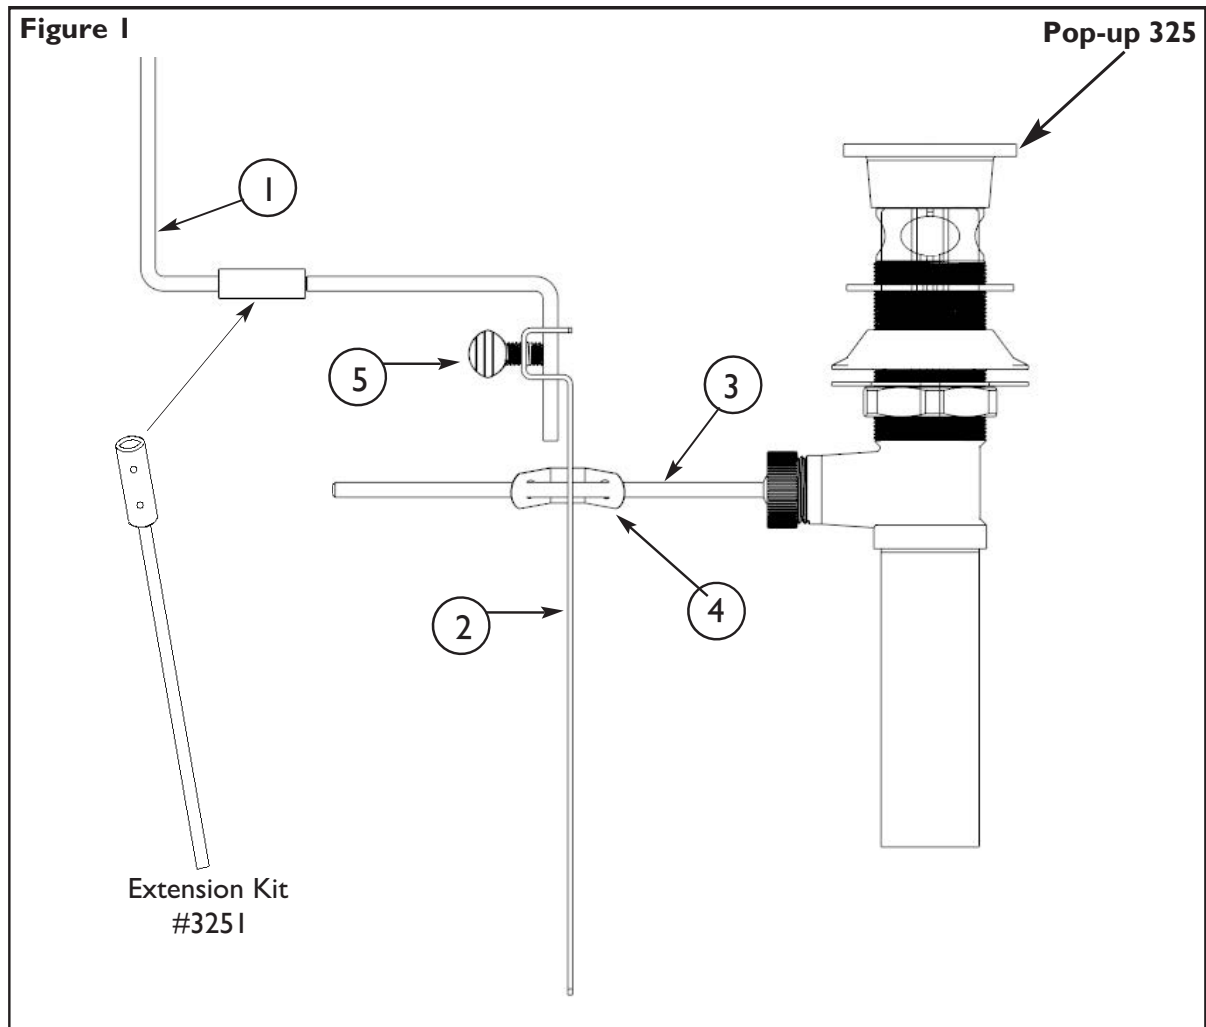

Note: Items 2, 3, 4, 5, come included with Pop-up 325 (sold separately).
Hand tube bender may be required to connect items.