
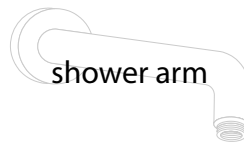



Prior to Installation:

This item is recommended to be installed by a licensed plumber or professional only. Please ensure to observe all local and building code requirements. Shut off water supply prior to installation.


Installation Instructions For Shower Set With:

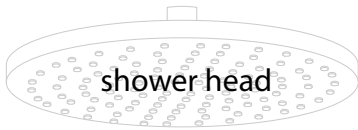

Tools You May Need:




plumber's
tape

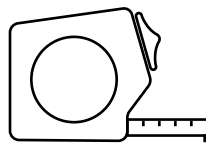


tape
measure




allen
wrench

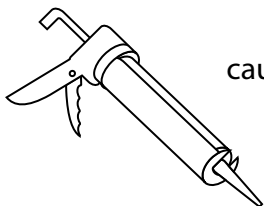


caulk

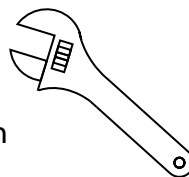

wrench

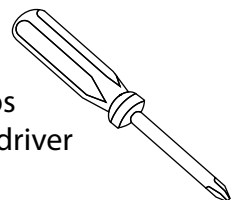

phillips
screwdriver


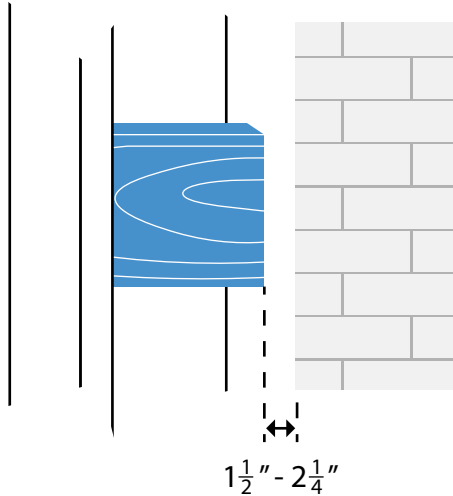


1. Prepare Location

Locate studs in the wall. Add wood blocking behind the finished wall where the mixer and shower arm will be placed. Total distance from finished wall should be between 1 $\frac{1}{2}$ " and 2 $\frac{1}{4}$ " for the valve.

2. Mount Valve

Rough-in valve mounts to internal pipes. Any further support needed can be manually done by licensed plumber or professional.

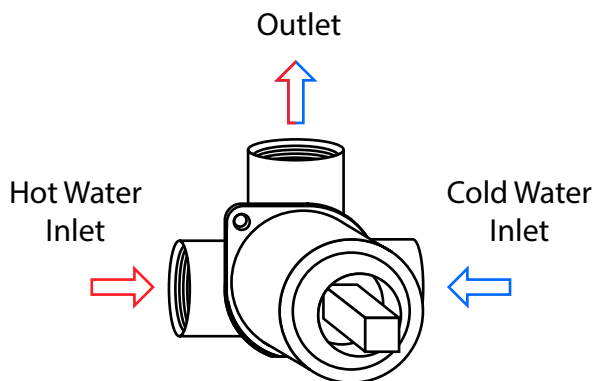
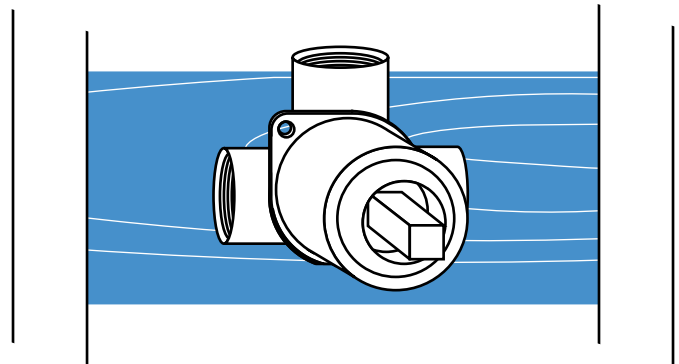


3. Connect Hot and Cold Water Lines

Connect the hot and cold water lines. The valve indicates which inlet is for each water temperature. Be sure to pressure test the fittings before finishing the wall.

4. Finish Wall

Close the wall and finish with desired exterior. Don't forget to measure and cut holes for valve and shower arm if using acrylic panels.

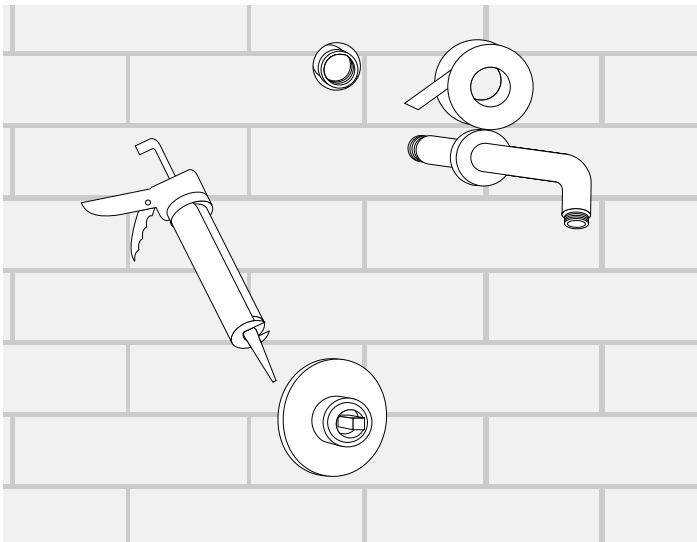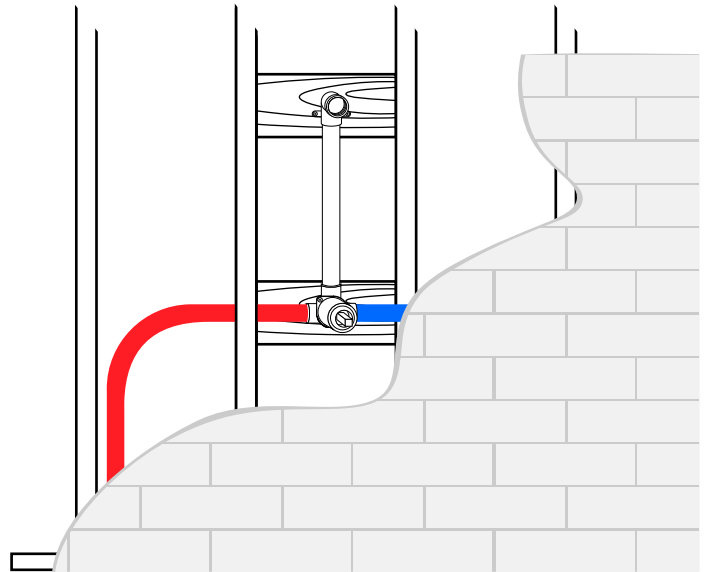


5. Install Cover Plate

Install the cover plate with a bead of silicone. Slide on the shower arm plate and install arm with plumber's tape. **Be careful** not to cross thread pipe.

6. Attach Mixer Handle


Attach the mixer handle to the valve. Secure firmly by tightening with allen wrench. Screw on shower head on to the shower arm with plumber's tape and tighten with wrench.

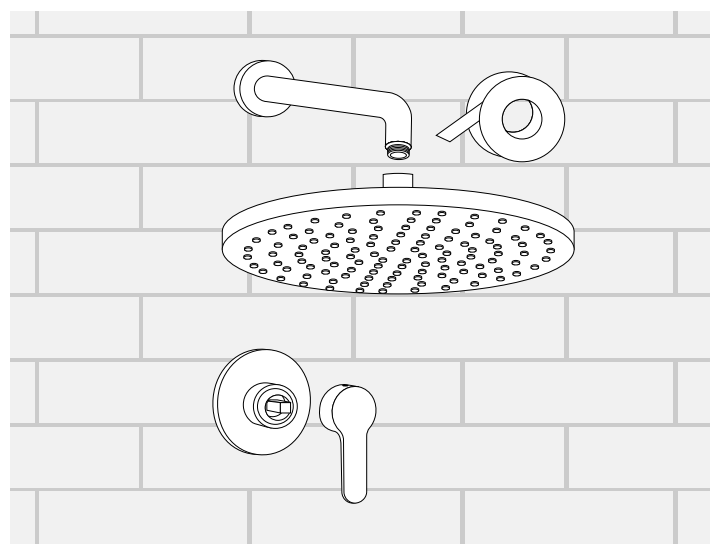


7. Shower Accessories

Complete your installation by adding the preferred shower accessories; shower basket, wire soap dish, and train rack.

shower basket



wire soap dish



train rack

