

Wall Mounted Grab Bar SGB

Installation Instructions

Model Numbers

SGB-18...... 18 inch ADA Grab Bar SGB-24..... 24 inch ADA Grab Bar


SGB-12...... 12 inch ADA Grab Bar

SGB-36...... 36 inch ADA Grab Bar

SGB-42...... 42 inch ADA Grab Bar

SGB-48...... 48 inch ADA Grab Bar

Tools and Materials



Finish Options

Append appropriate -suffix to model number

☐ -STN Satin Nickel

- Polished chrome (standard finish)

■ Need Help?


Symmons customer service: P: (800) 796-6667 gethelp@symmons.com Mon - Fri 7:30 am - 7:00 pm EST

www.symmons.com/service

- Technical help
- Product information
- Warranty policy

Compliance

2010 ADA Standards for Accessible Design Grab bar assembly complies with the applicable requirements.

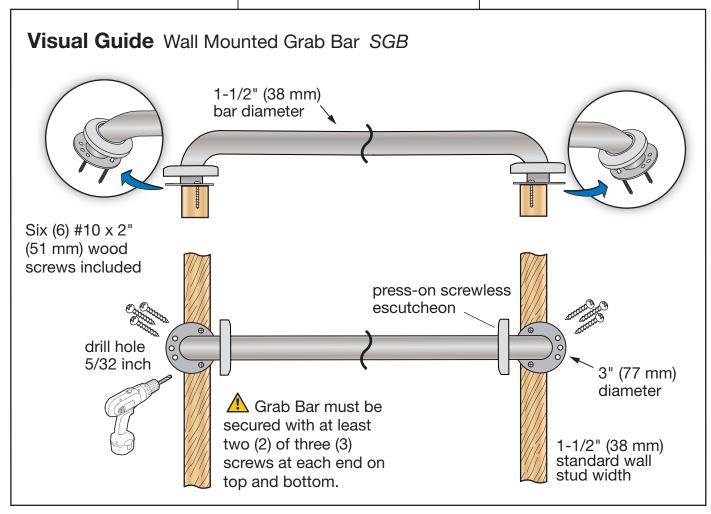

Installation Notes

Grab Bar Location

For proper mounting heights and location consult with your state and local code official having jurisdiction over the installation.

Solid Support

- Grab Bar must be mounted with both ends positioned over a wall stud. A stud finder can be used to locate wall studs. Contractor is responsible for installing Grab Bar to wall studs as instructed.
- Secure through wall board or tile to the wall stud so as to hold a minimum of 250 pounds of force.
- At least two (2) of the three (3) screws provided must be used on each end of the Grab Bar to properly secure.

Note: Standard size wall stud limits using more than two (2) screws.

Mounting Grab Bar

- Drill all holes through wall board into wood wall studs using a power drill and a 5/32 inch drill bit.
- Ceramic tiles If installing Grab Bar over ceramic tiles, first drill a pilot hole through the tile using a 1/4 inch carbide tip drill bit to prevent damage to the tiles.

Next, drill a pilot hole into the wood wall stud using the 5/32 inch drill bit.

Care and Cleaning

Mild soap and water or a non-abrasive cleaner is recommended for cleaning.

